

通告

二零一三年三月十五日

X100S 和 X20 韌體更新 Ver 1.01

X100S 和 X20 韌體更新作出了輕微的錯誤修正。

請於以下連結進行下載：

X100S :

http://www.fujifilm.com.hk/support/digital_cameras/software/firmware/x/x100s/X100S_Ver101.zip

X20:

http://www.fujifilm.com.hk/support/digital_cameras/software/firmware/x/x20/X20_Ver101.zip

升級程序：

1. 將下載檔案解壓。
2. 將 "FPUUPDATE.DAT" 抄到記憶卡根部 (Root, 即最外面)。
3. 確保相機電池完全充滿。
4. 將記憶卡插入相機。
5. 按著 [DISP/BACK] 鍵 + 開機進入升級畫面。
6. 按 [MENU/OK] 鍵執行。
7. 按 [左] 鍵選 "執行", 然後按 [MENU/OK] 鍵開始升級。

在升級過程中, 請不要關機及打開電池蓋

直至 LCD 顯示

升級完成.

請關機.

版本 : 1.01

Notice

FUJIFILM X100S & X20 Firmware Update Ver 1.01

These firmware updates contain minor bug fix.

Please download the file as below:

X100S :

http://www.fujifilm.com.hk/support/digital_cameras/software/firmware/x/x100s/X100S_Ver101.zip

X20

http://www.fujifilm.com.hk/support/digital_cameras/software/firmware/x/x20/X20_Ver101.zip

Steps of updating are as follows:

- 1) Unzip the file downloaded.
- 2) Copy the "FPUPDATE.DAT" file onto the root directory of your SD card.
- 3) Always use fully-charged battery when updating the firmware.
- 4) Insert the SD card into the camera.
- 5) Turn on the camera while holding down [DISP/BACK] button.
- 6) Press the [MENU/OK] button.
- 7) Press the [left button] to select "OK" and then press [MENU/OK] button.
DO NOT OPEN THE BATTERY COVER NOR TURN OFF THECAMERA.
- 8) When LCD screen appears following message, the firmware update has been successfully completed.

FIRMWARE UPGRADE COMPLETED.

TURN OFF THE CAMERA

VERSION NO. : 1.01

~End~